




## ***Conversion to install Bidematic on the left side of the toilet for left hand operation.***




**Step 1:** Place your Bidematic in initial position as shown above.

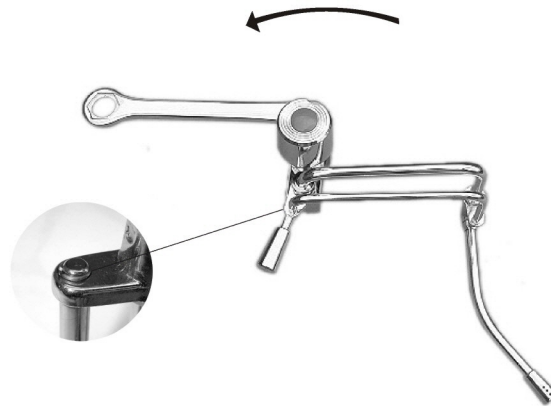

**Step 2:** Turn support arm 180 degrees to the left. Then remove locking ring attached to guide rod using flat nose pliers.



**Step 3:** Release guide rod.

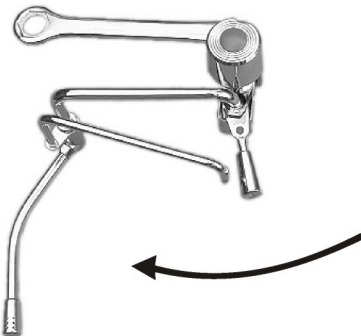

**Step 4:** Rotate parts 180 degrees as shown above. Place guide rod in its initial position.



**Step 5:** Secure locking ring back in its initial position.



**Step 6:** Loosen shower arm lock nut. Then rotate shower arm and spout. Finally, secure lock nut.